

QUICK-START GUIDE*

for PRO-TILL 10/13

* Refer to operators manual for complete safety and operation info.







Degelman

A Connect tractor to 3-point hitch.

(NOTE: Adjust pin locations to coincide with CAT size of tractor's 3-point system.)



B Connect Hydraulics **1 DEPTH**

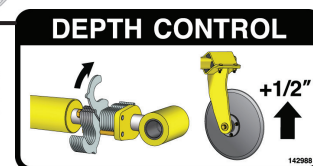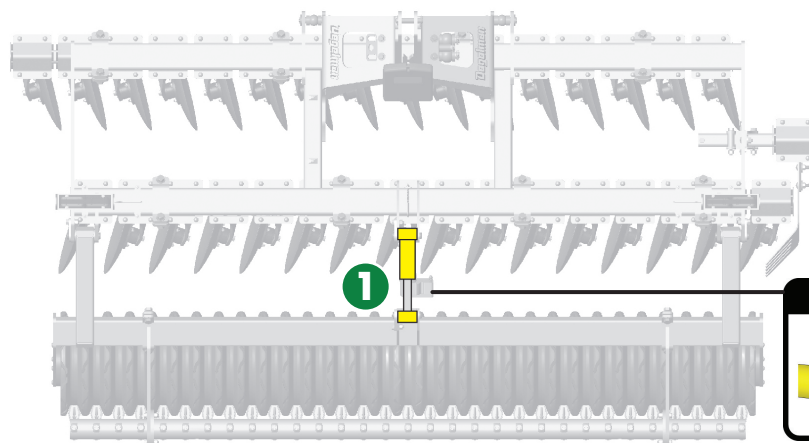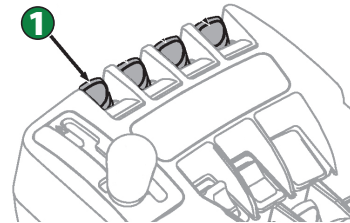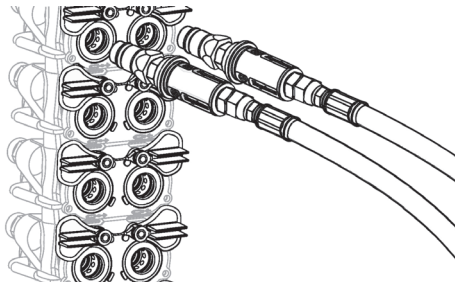

C Lower Machine


D Set Cutting Depth

IMPORTANT: Cycle oil in the Depth Control Cylinder **1** before use. This is especially important after long periods of storage.

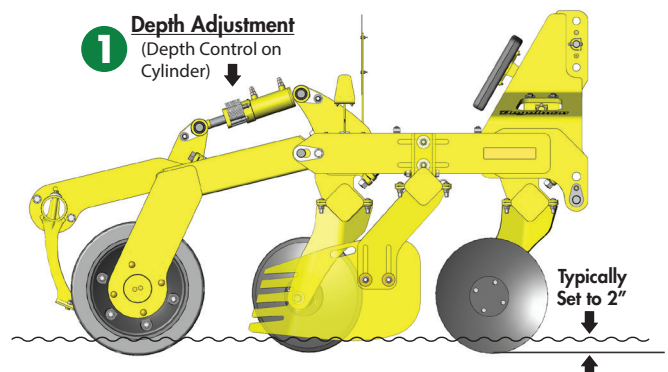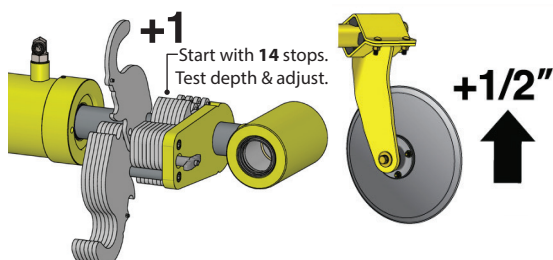

E Test. Check. Adjust.

(NOTE: Adjust top link of 3-point hitch to level unit at desired depth.)

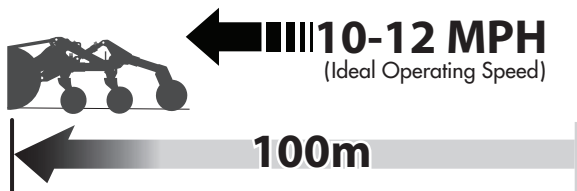

F Raise 1 for Headland Turns.



Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Check for missing, worn or damaged parts.

* Refer to operators manual for complete safety and operation info.



GPS Reference

(Set overlap to 4" per side)

(with 20" discs) **2" Depth**

Pro-Till 10 117" (9.98m)

Pro-Till 13 157" (3.99m)

(with 20" discs) **MAX Depth**

Pro-Till 10 119" (3.02m)

Pro-Till 13 159" (4.04m)

Scraper Position Overview (Rubber Roller)

