


QUICK-START GUIDE*

for PRO-TILL 14/17/20NT

* Refer to operators manual for complete safety and operation info.




A Connect Hydraulics

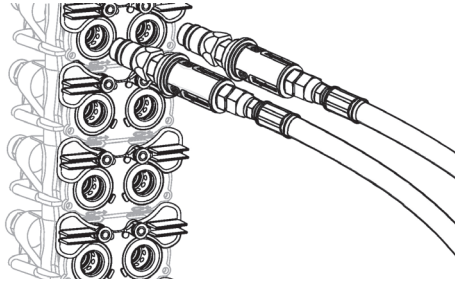


- 1 DEPTH
- 2 WINGS
- 3 TRANSPORT
- 4 JACK


CONSTANT PRESSURE 2 - Only for Pro-Till 20NT models with constant wing pressure kit installed -

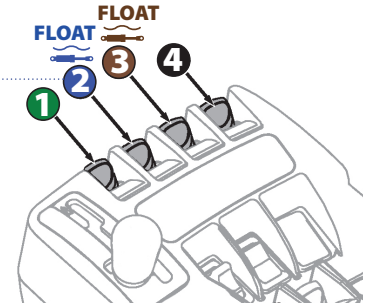

1 IMPORTANT:
Re-phase and cycle oil in the Depth Control Cylinders before use (especially after long periods or storage).

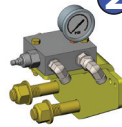

2 IMPORTANT: - PT20NT Constant Wing Pressure Models ONLY -
The Wing Cylinder Circuit includes a Down Pressure Valve.
• Operator must engage wing circuit hydraulics *constantly* in the extended direction to ensure constant down pressure.
• Adjust wing circuit flow down to 20-30% to reduce heat build-up.

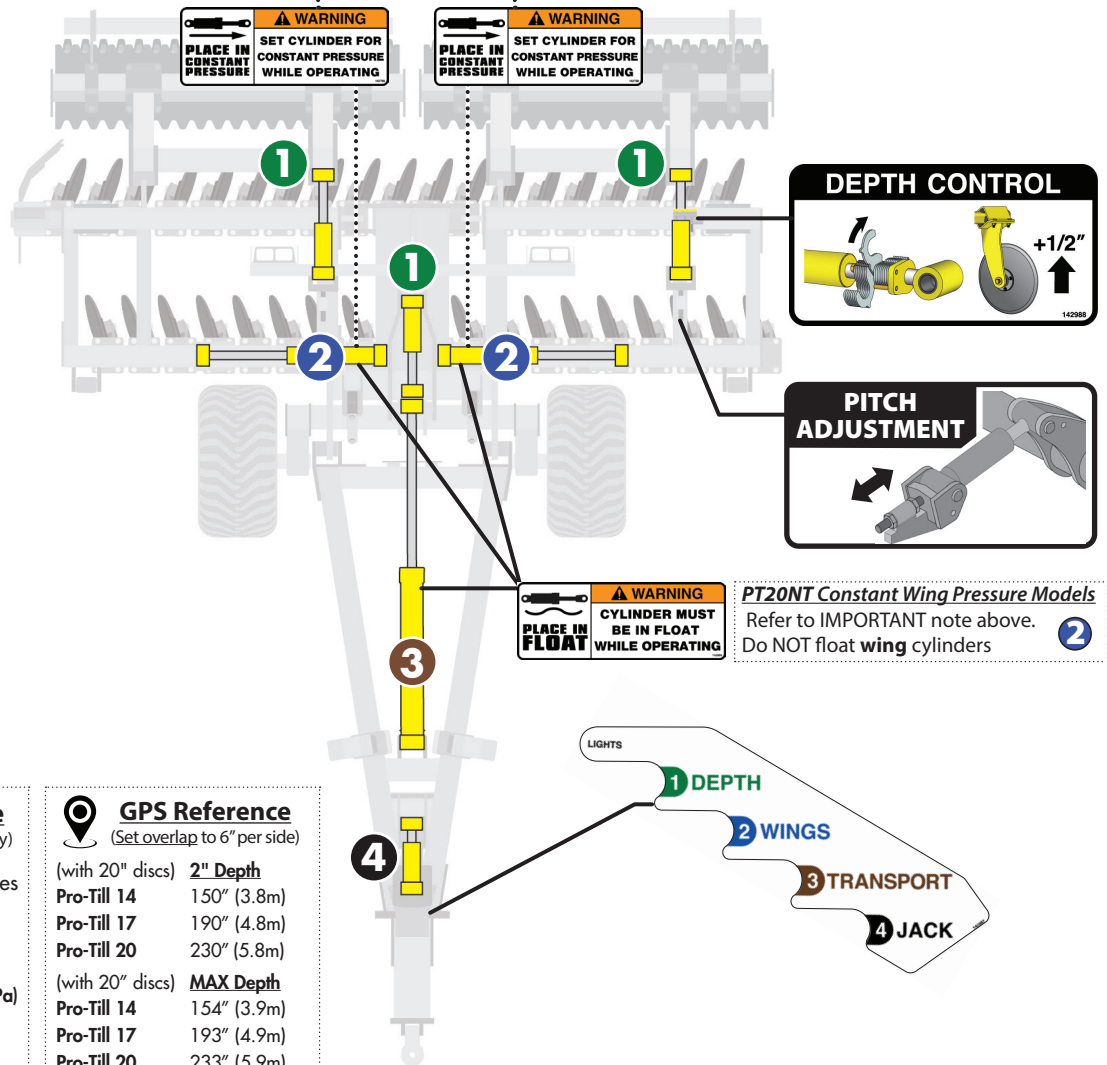

Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs & Spindles
- Tire Pressure: **41 PSI (283 kPa)**
- Check for missing, worn or damaged parts.

* Refer to operators manual for complete safety and operation info.




GPS Reference

(Set overlap to 6" per side)

(with 20" discs)	2" Depth
Pro-Till 14	150" (3.8m)
Pro-Till 17	190" (4.8m)
Pro-Till 20	230" (5.8m)
(with 20" discs)	MAX Depth
Pro-Till 14	154" (3.9m)
Pro-Till 17	193" (4.9m)
Pro-Till 20	233" (5.9m)

(Consider setting the GPS to include a 6" implement offset to the right)

B Put in Field Position


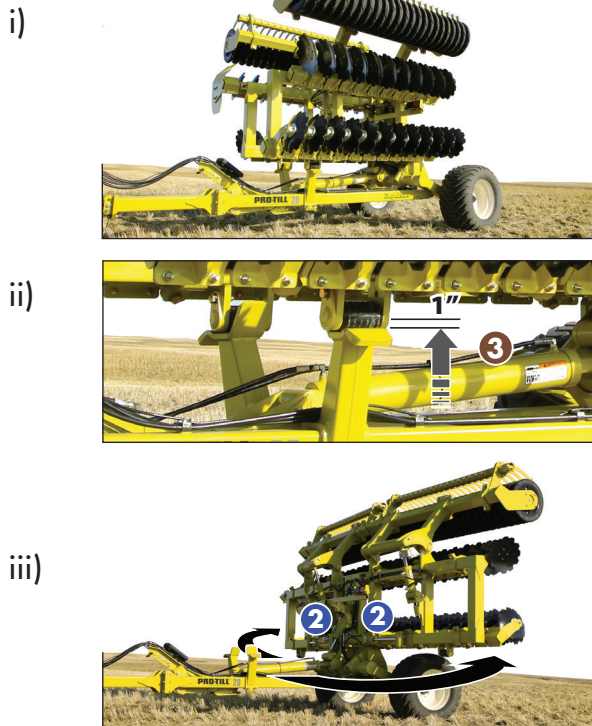


v) **IMPORTANT:** Operator **must** read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.


<p>PLACE IN FLOAT</p>	<p>WARNING ENSURE TRANSPORT CYLINDERS ARE PLACED IN FLOAT</p>	<p>3 Float Transport Cylinders (All models)</p>
	<p>WARNING SET CYLINDER FOR CONSTANT PRESSURE WHILE OPERATING</p>	<p>2 Float Wing Cylinders</p>
<p>PLACE IN CONSTANT PRESSURE</p>	<p>WARNING SET CYLINDER FOR CONSTANT PRESSURE WHILE OPERATING</p>	<p>2 -PT20NT Models with Constant Pressure Wing Cylinders ONLY-</p>

C Set Cutting Depth

IMPORTANT: Re-phase and cycle oil in the Depth Control Cylinders **1** before use. This is especially important after long periods of storage.

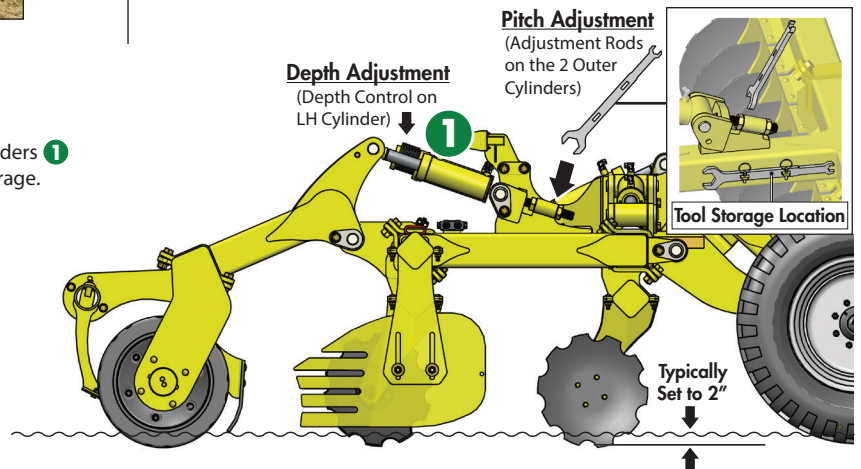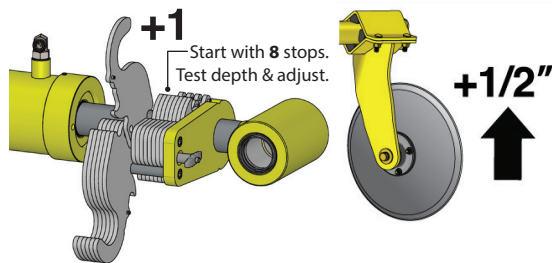

D Test. Check. Adjust.

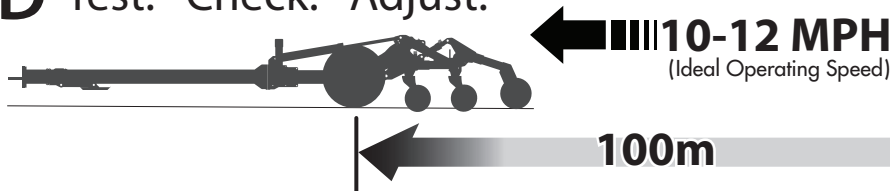

E Raise **1** for Headland Turns.

F MAX Transport Speed: 40 km/h (25 MPH)

Scraper Position Overview (Rubber Rollers)

