

QUICK-START GUIDE*


for PRO-TILL 22

* Refer to operators manual for complete safety and operation info.




Degelman

A Connect Hydraulics

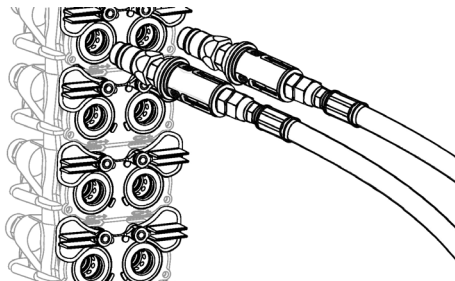


- 1 DEPTH**
- 2 WINGS**
- 3 TRANSPORT**
- 4 JACK**

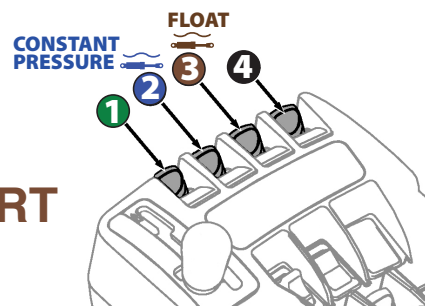

1 IMPORTANT:
Re-phase and cycle oil in the Depth Control Cylinders before use (especially after long periods or storage).



2 IMPORTANT: Constant Wing Pressure
The Wing Cylinder Circuit includes a Down Pressure Valve.
• Operator must engage wing circuit hydraulics *constantly* in the extended direction to ensure constant down pressure.
• Adjust wing circuit flow down to 20-30% to reduce heat build-up.

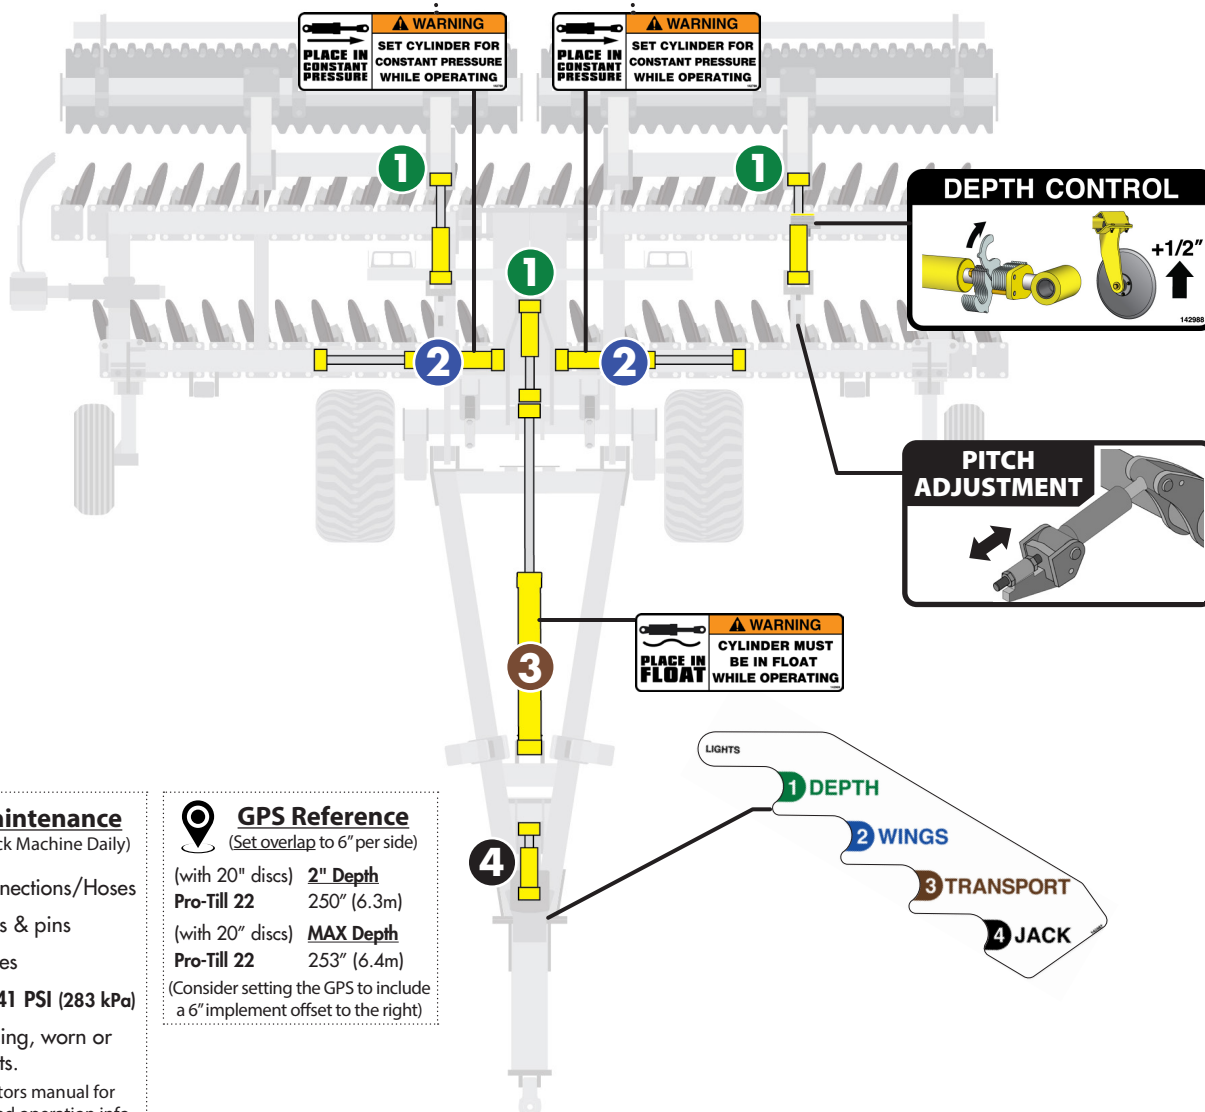

Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs & Spindles
- Tire Pressure: **41 PSI (283 kPa)**
- Check for missing, worn or damaged parts.

* Refer to operators manual for complete safety and operation info.



GPS Reference

(Set overlap to 6" per side)

(with 20" discs) **2" Depth**
Pro-Till 22 250" (6.3m)

(with 20" discs) **MAX Depth**
Pro-Till 22 253" (6.4m)


(Consider setting the GPS to include a 6" implement offset to the right)

B Put in Field Position


i)



ii)

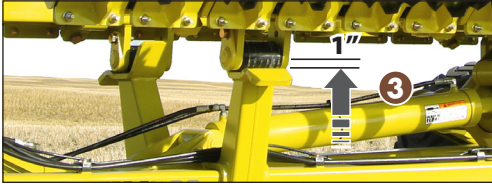

iii)

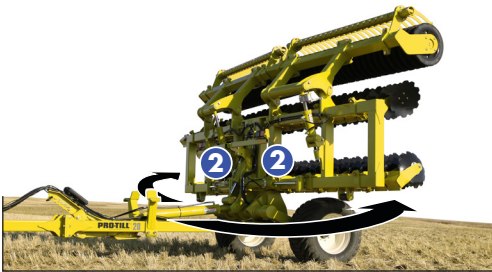

iv)



- v) **IMPORTANT:** Operator must read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.





➔ **3** Float Transport Cylinders




➔ **2** Constant Pressure Wing Cylinders ONLY

C Set Cutting Depth

IMPORTANT: Re-phase and cycle oil in the Depth Control Cylinders **1** before use. This is especially important after long periods of storage.

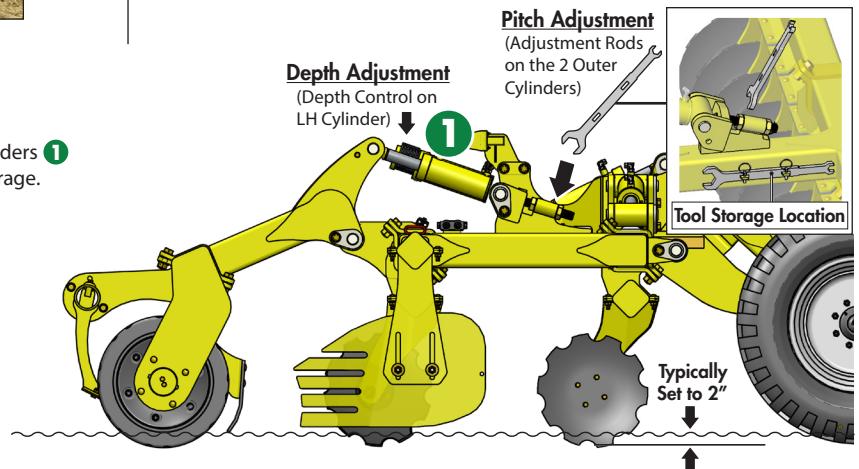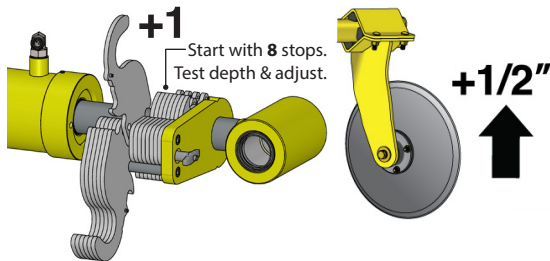

D Test. Check. Adjust.

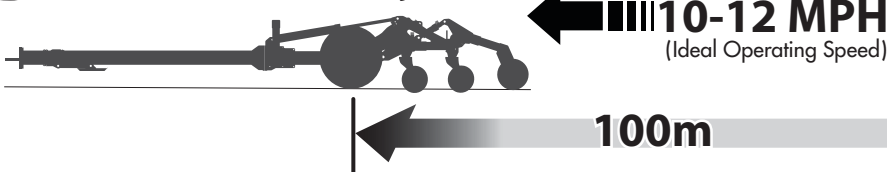

E Raise **1** for Headland Turns.

F MAX Transport Speed: 40 km/h (25 MPH)

Scraper Position Overview (Rubber Rollers)

