



\* Refer to operators manual for complete safety and operation info.





## A Connect Hydraulics

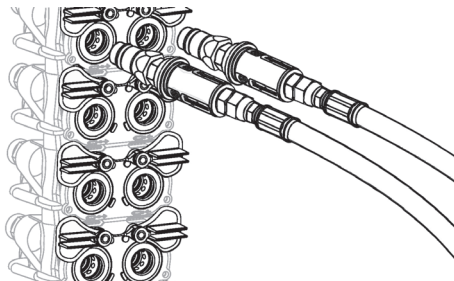

- 1 DEPTH
- 2 WINGS
- 3 TRANSPORT
- 4 JACK

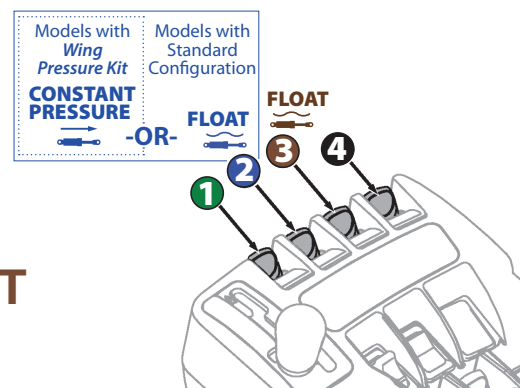

The **Wing Cylinder Circuit** includes a **Down Pressure Valve**. Operator must engage wing circuit hydraulics **constantly** in the extended direction to ensure constant down pressure.

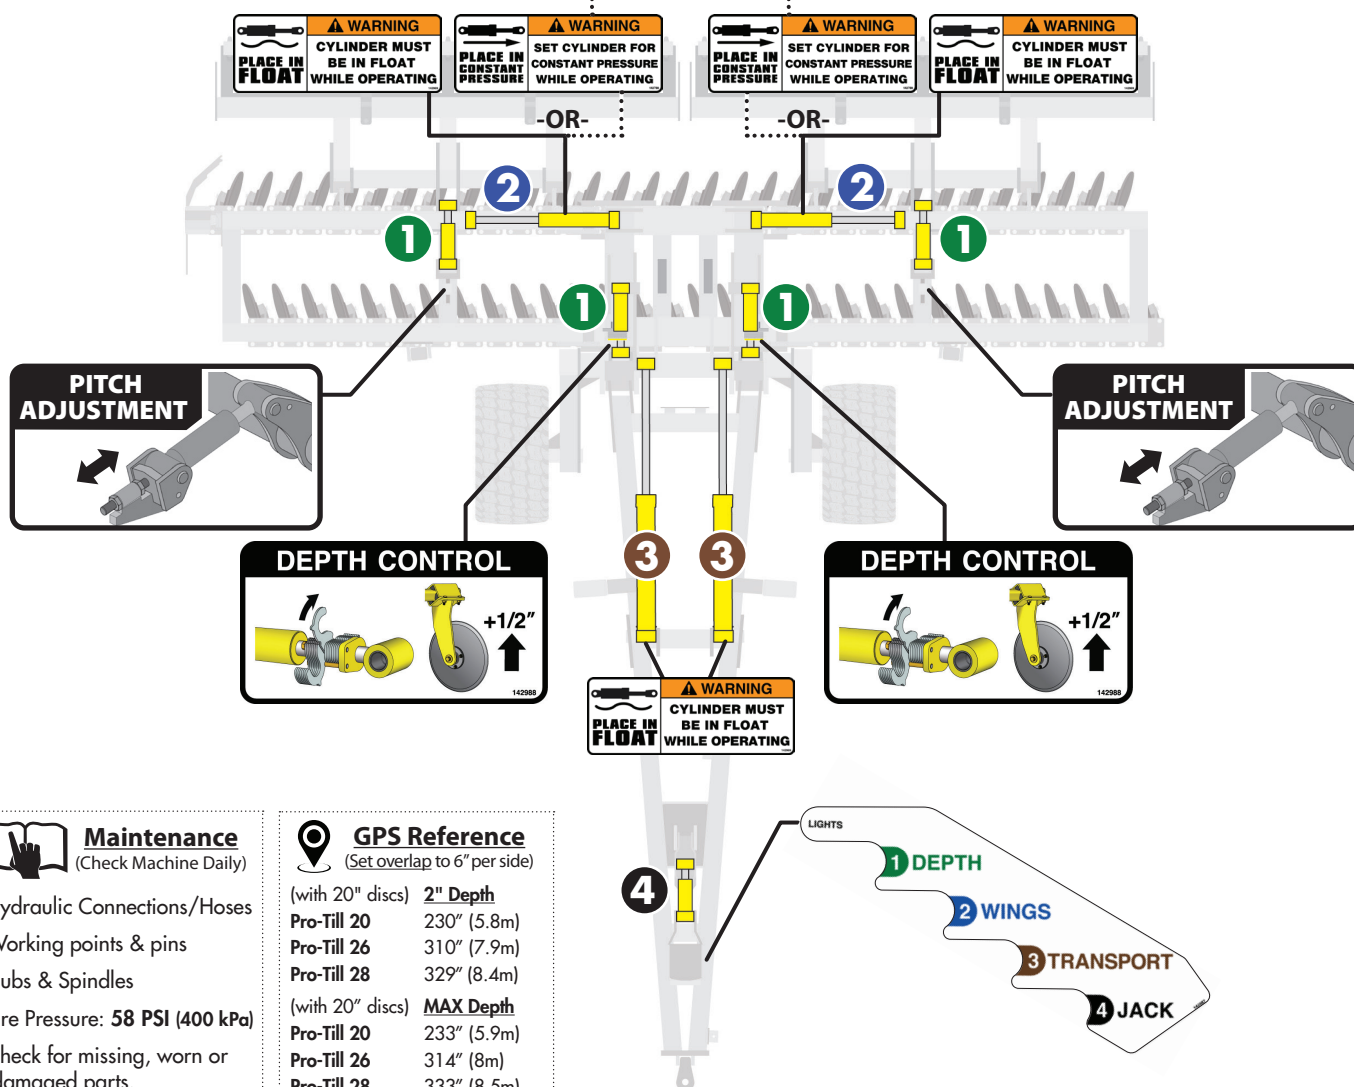

**Maintenance**  
(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs & Spindles
- Tire Pressure: **58 PSI (400 kPa)**
- Check for missing, worn or damaged parts.






(Set overlap to 6" per side)

|                    |                  |
|--------------------|------------------|
| (with 20" discs)   | <b>2" Depth</b>  |
| <b>Pro-Till 20</b> | 230" (5.8m)      |
| <b>Pro-Till 26</b> | 310" (7.9m)      |
| <b>Pro-Till 28</b> | 329" (8.4m)      |
| (with 20" discs)   | <b>MAX Depth</b> |
| <b>Pro-Till 20</b> | 233" (5.9m)      |
| <b>Pro-Till 26</b> | 314" (8m)        |
| <b>Pro-Till 28</b> | 333" (8.5m)      |

(Consider setting the GPS to include a 6" implement offset to the right)

**143366 v1.6**



## B Put in Field Position

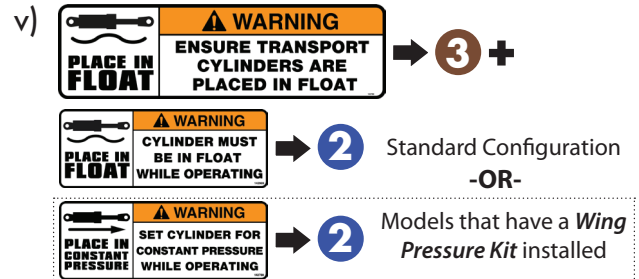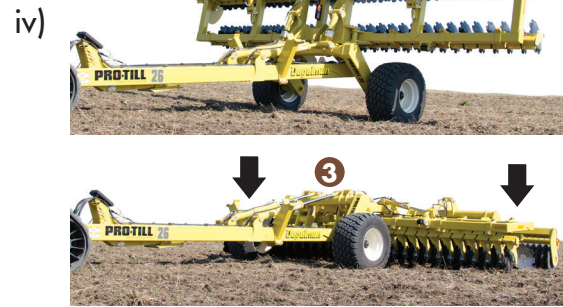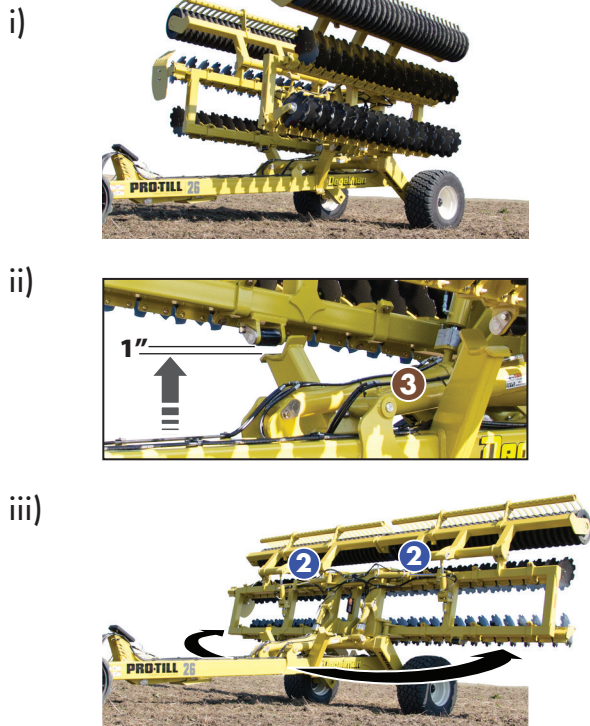


**IMPORTANT:** Operator must read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.

## C Set Cutting Depth

**IMPORTANT:** Re-phase and cycle oil in the Depth Control Cylinders ① before use. This is especially important after long periods of storage.

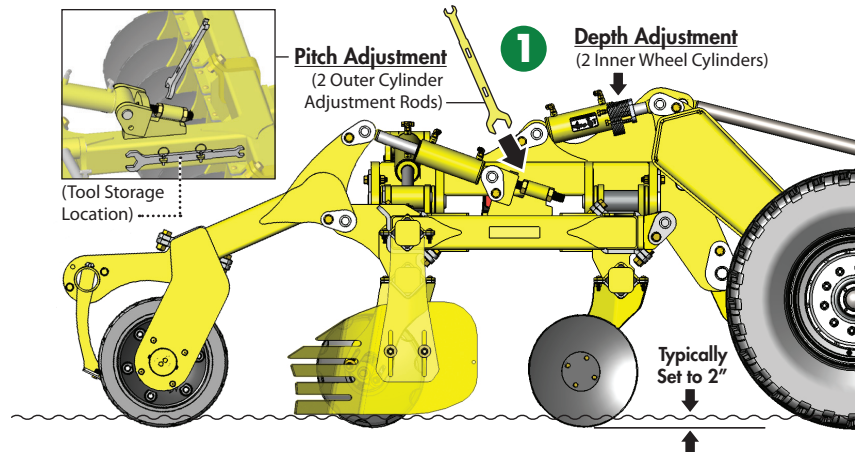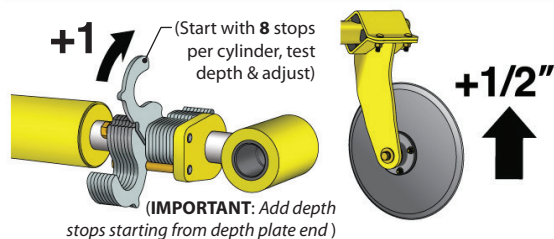

## D Test. Check. Adjust.

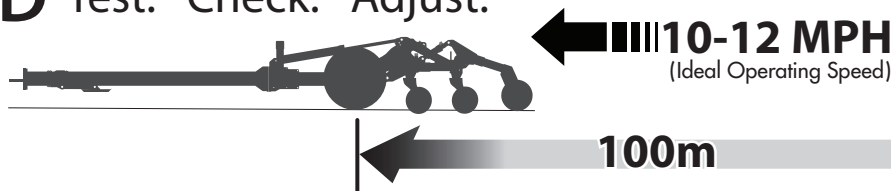

## E Raise ① for Headland Turns.

## F MAX Transport Speed: 40 km/h (25 MPH)

### Scrapper Position Overview (Rubber Rollers)

