

QUICK-START GUIDE*


for PRO-TILL 20/26

* Refer to operators manual for complete safety and operation info.





Degelman

A Connect Hydraulics

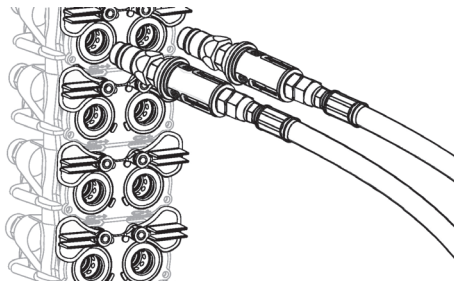

- 1 DEPTH
- 2 WINGS
- 3 TRANSPORT
- 4 JACK

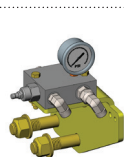
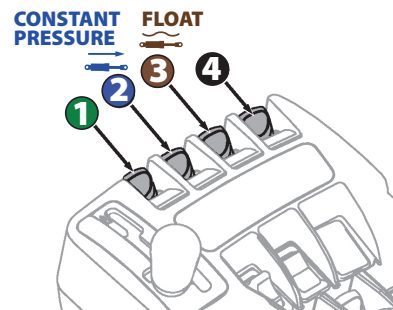


IMPORTANT: Constant Wing Pressure

- The *Wing Cylinder Circuit* includes a *Down Pressure Valve*.
- Operator must engage wing circuit hydraulics *constantly* in the extended direction to ensure constant down pressure.
 - Adjust wing circuit flow down to 20-30% to reduce heat build-up.

REAR DISC DEPTH

DEPTH CONTROL

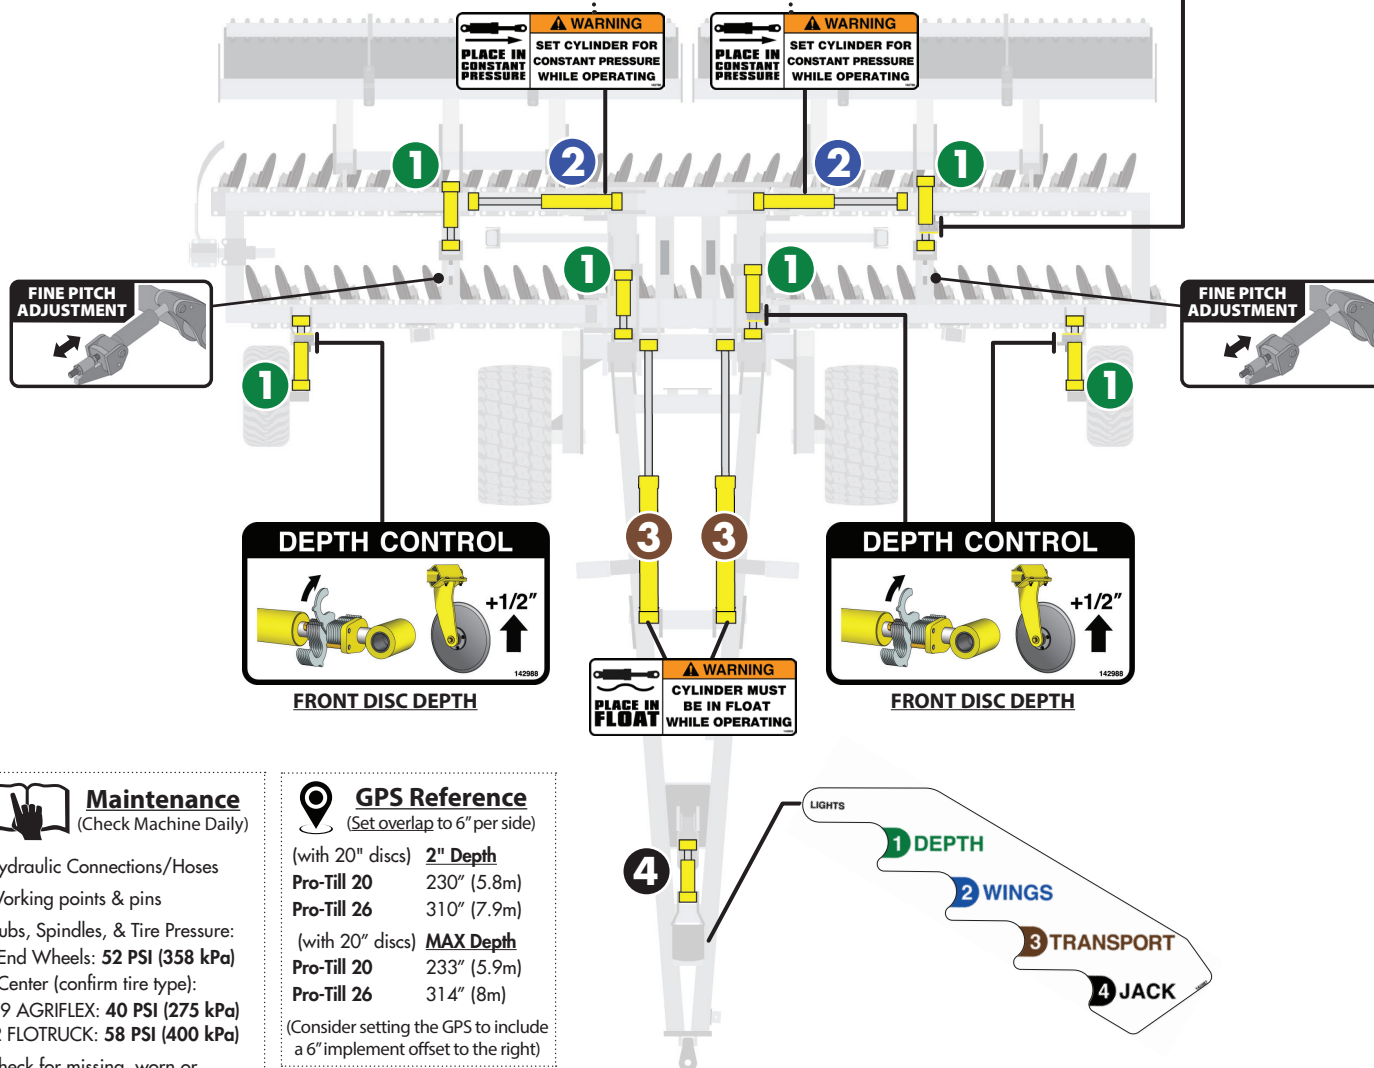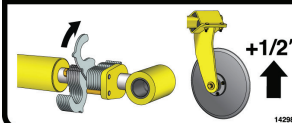

Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs, Spindles, & Tire Pressure:
 - End Wheels: 52 PSI (358 kPa)
 - Center (confirm tire type):
 - 389 AGRIFLEX: 40 PSI (275 kPa)
 - 382 FLOTRUCK: 58 PSI (400 kPa)
- Check for missing, worn or damaged parts.



GPS Reference

(Set overlap to 6" per side)

(with 20" discs)	2" Depth
Pro-Till 20	230" (5.8m)
Pro-Till 26	310" (7.9m)
(with 20" discs)	MAX Depth
Pro-Till 20	233" (5.9m)
Pro-Till 26	314" (8m)

(Consider setting the GPS to include a 6" implement offset to the right)

* Refer to operators manual for complete safety and operation info.

B Put in Field Position

i)




ii)



iii)



iv)


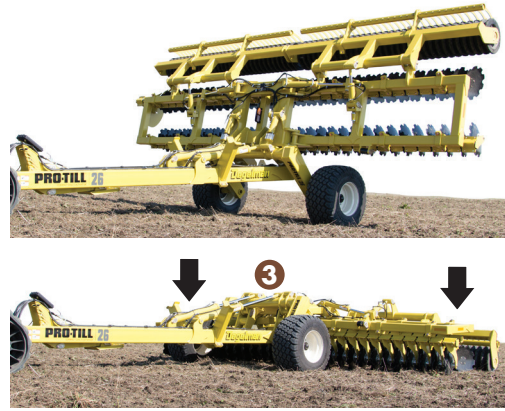


v) **IMPORTANT:** Operator must read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.


	WARNING ENSURE TRANSPORT CYLINDERS ARE PLACED IN FLOAT	→ 3 Float Transport Cylinders
	WARNING SET CYLINDER FOR CONSTANT PRESSURE WHILE OPERATING	→ 2 Constant Pressure Wing Cylinders

C Set Cutting Depth

IMPORTANT: Re-phase and cycle oil in the Depth Control Cylinders 1 before use. This is especially important after long periods of storage.

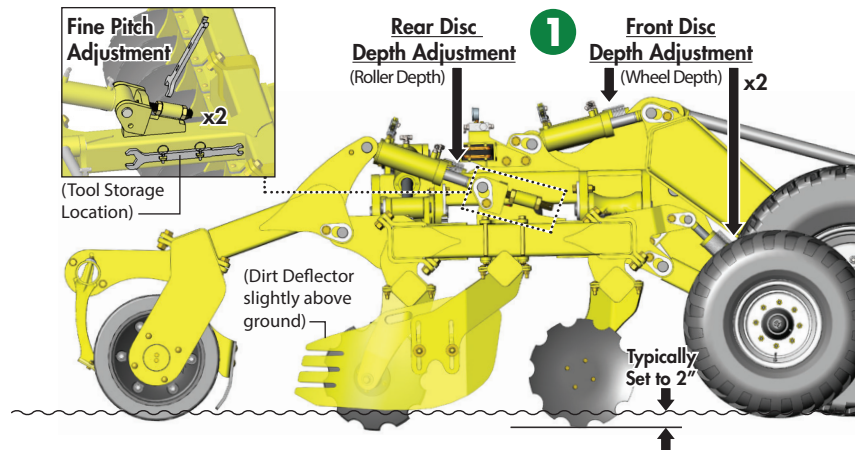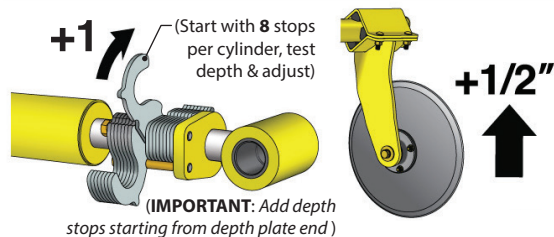

D Test. Check. Adjust.

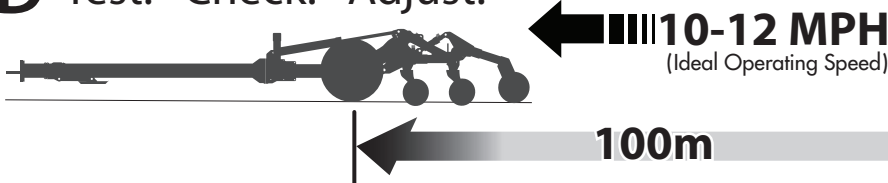

E Raise 1 for Headland Turns.

F MAX Transport Speed: 40 km/h (25 MPH)

Scraper Position Overview (Rubber Rollers)

