

QUICK-START GUIDE*


for PRO-TILL 25/30/36

* Refer to operators manual for complete safety and operation info.




DeGelman


A Connect Hydraulics

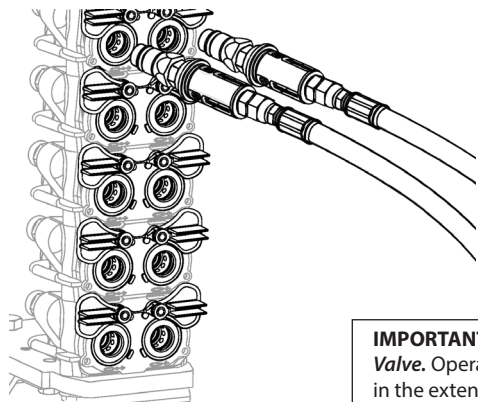

- 1 WHEELS
- 2 ROLLERS
- 3 TRANSPORT
- 4 WINGS
- 5 JACK

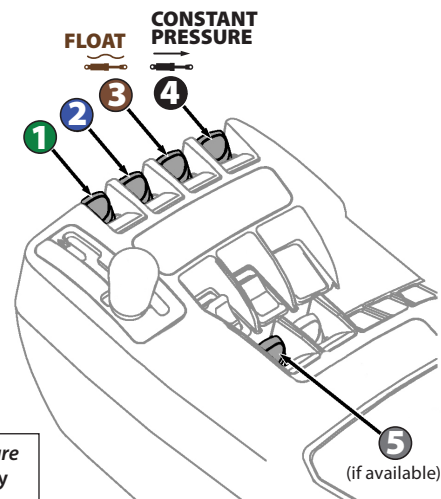

IMPORTANT: The *Wing Cylinder Circuit* includes a *Down Pressure Valve*. Operator must engage wing circuit hydraulics constantly in the extended direction to ensure constant down pressure. Adjust wing circuit flow down to 20-30% to reduce heat build-up.

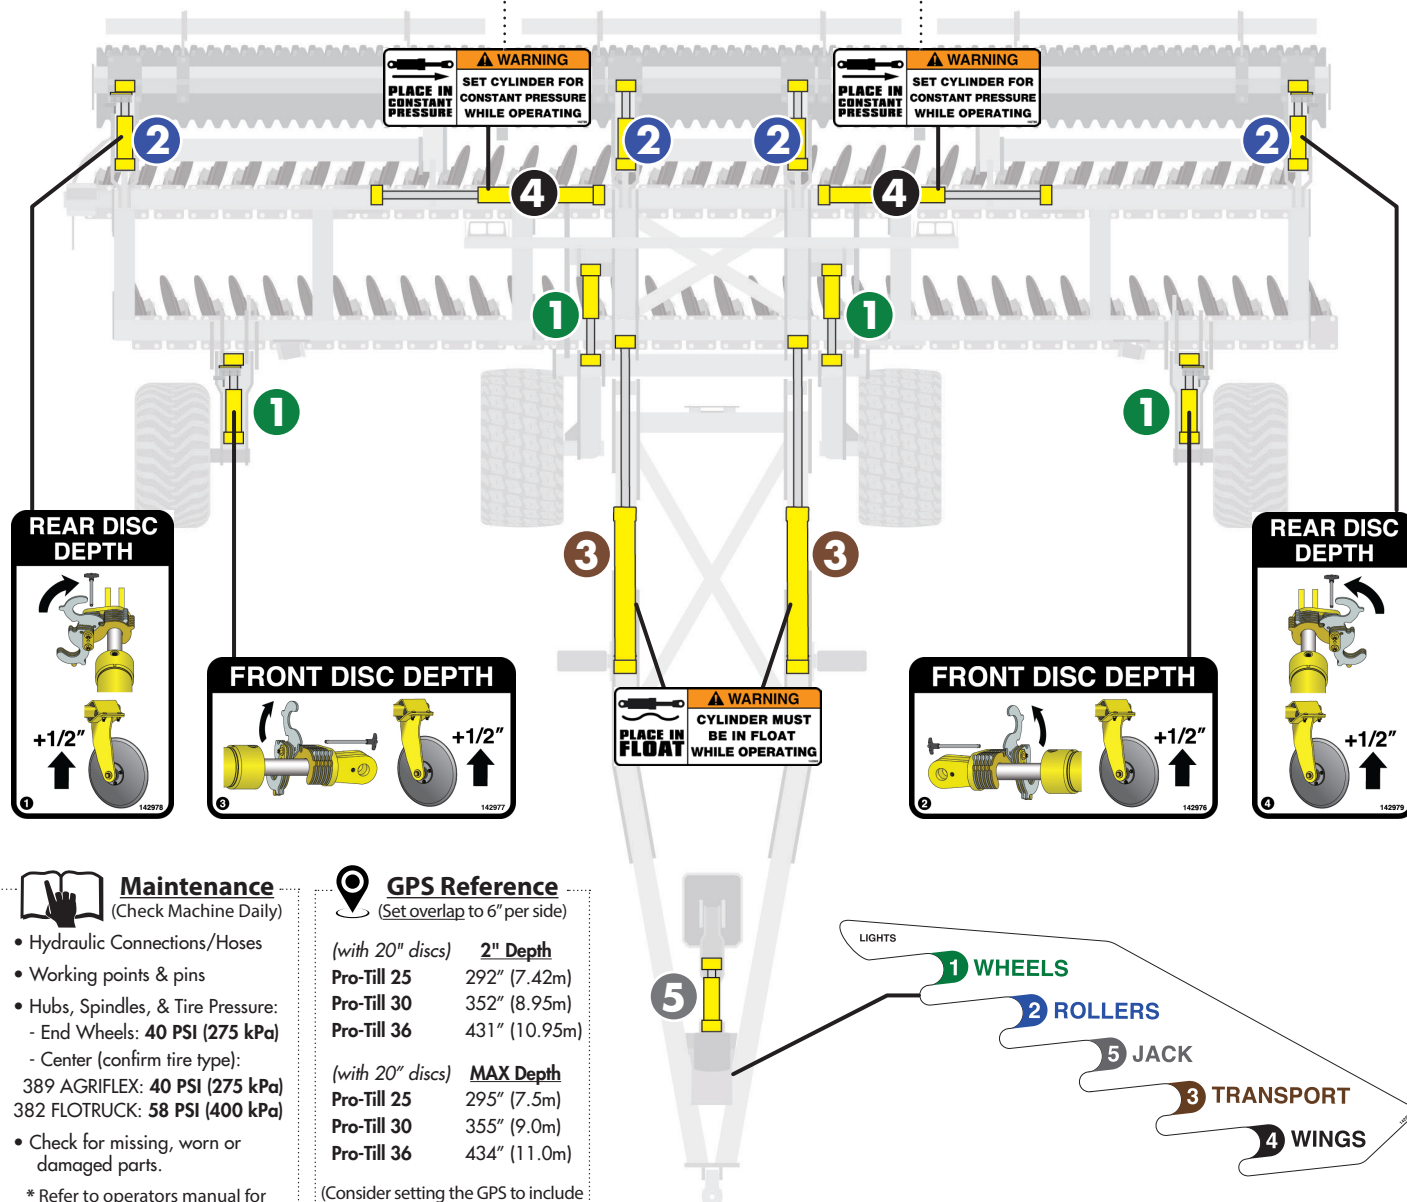

Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs, Spindles, & Tire Pressure:
 - End Wheels: **40 PSI (275 kPa)**
 - Center (confirm tire type):
 - 389 AGRIFLEX: **40 PSI (275 kPa)**
 - 382 FLOTURCK: **58 PSI (400 kPa)**
- Check for missing, worn or damaged parts.

* Refer to operators manual for complete safety and operation info.



GPS Reference

(Set overlap to 6" per side)




(with 20" discs)	2" Depth
Pro-Till 25	292" (7.42m)
Pro-Till 30	352" (8.95m)
Pro-Till 36	431" (10.95m)
(with 20" discs)	MAX Depth
Pro-Till 25	295" (7.5m)
Pro-Till 30	355" (9.0m)
Pro-Till 36	434" (11.0m)

(Consider setting the GPS to include a 6" implement offset to the right)

* Refer to operators manual for complete safety and operation info.

143411 v1.4



B Put in Field Position

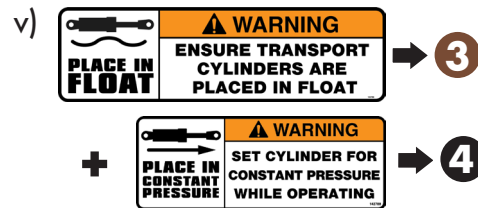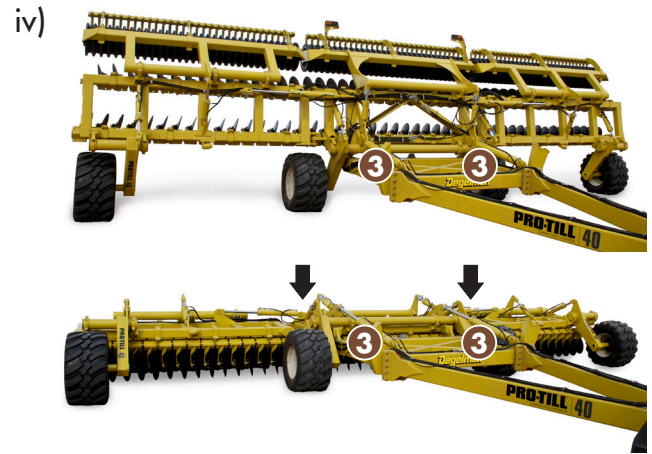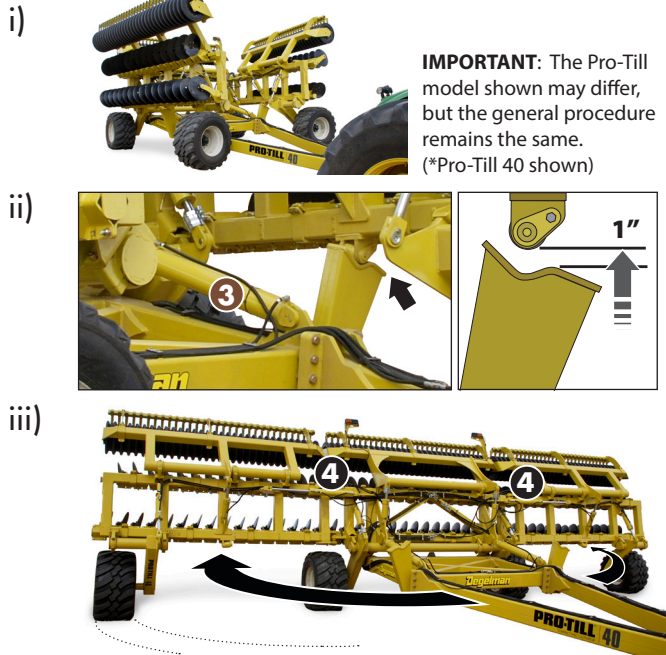


IMPORTANT: Operator must read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.

C Set Cutting Depth

IMPORTANT: Re-phase and cycle oil in the Depth Control Cylinders ① ② before use. This is especially important after long periods of storage.

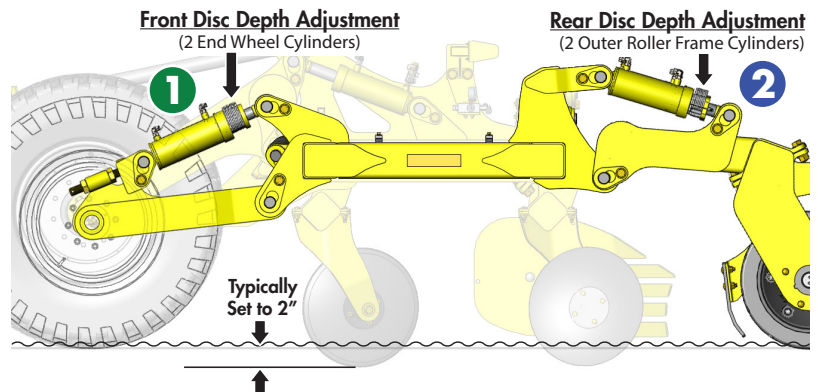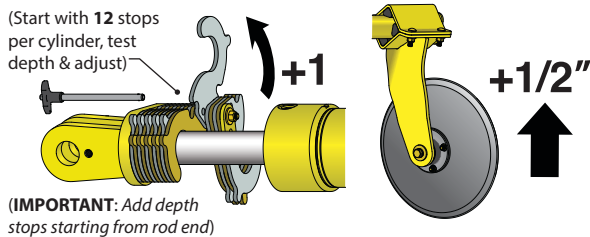

D Test. Check. Adjust.

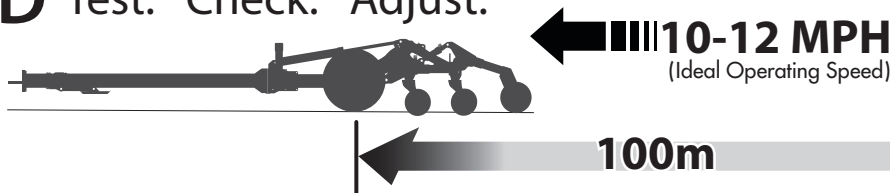

E Lower ① Wheels for Headland Turns.

F MAX Transport Speed: 40 km/h (25 MPH)

Scrapper Position Overview (Rubber Rollers)

