

# QUICK-START GUIDE\*


## for PRO-TILL 30/36

\* Refer to operators manual for complete safety and operation info.




**DeGelman**


## A Connect Hydraulics

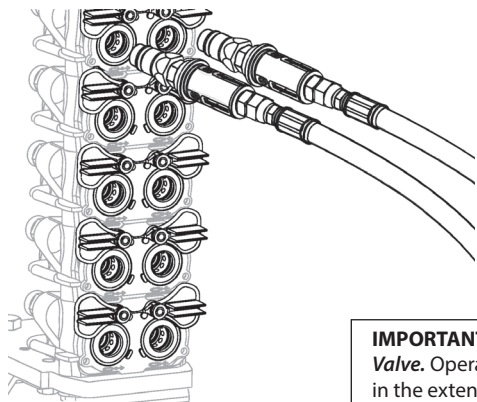

- 1 WHEELS
- 2 ROLLERS
- 3 TRANSPORT
- 4 WINGS
- 5 JACK

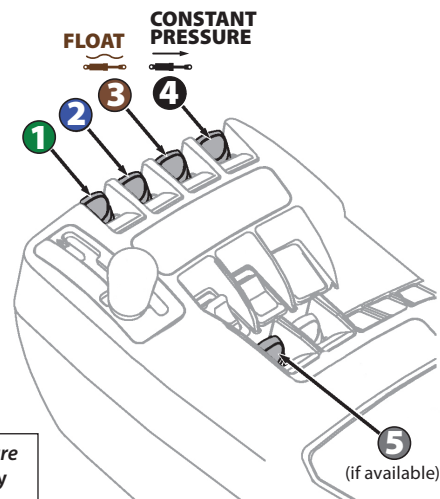

**IMPORTANT:** The *Wing Cylinder Circuit* includes a *Down Pressure Valve*. Operator must engage wing circuit hydraulics **constantly** in the extended direction to ensure constant down pressure. Adjust wing circuit flow down to 20-30% to reduce heat build-up.

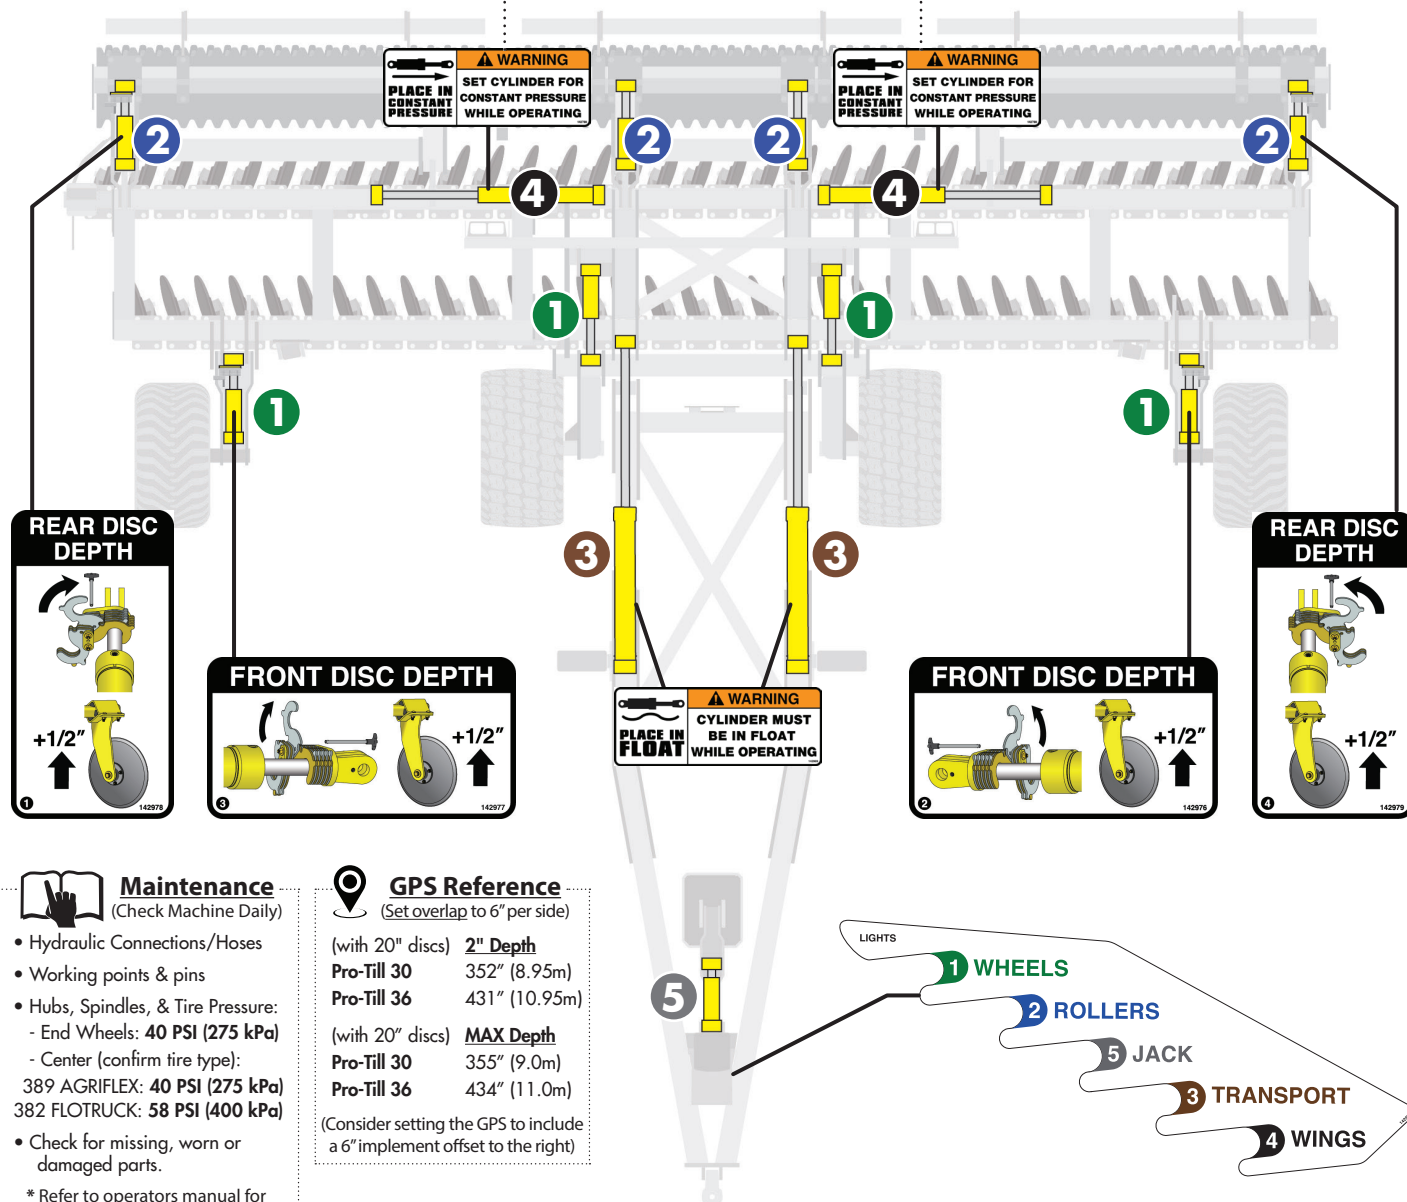

### Maintenance

(Check Machine Daily)

- Hydraulic Connections/Hoses
- Working points & pins
- Hubs, Spindles, & Tire Pressure:
  - End Wheels: **40 PSI (275 kPa)**
  - Center (confirm tire type):
  - 389 AGRIFLEX: **40 PSI (275 kPa)**
  - 382 FLOTURCK: **58 PSI (400 kPa)**
- Check for missing, worn or damaged parts.

\* Refer to operators manual for complete safety and operation info.



### GPS Reference

(Set overlap to 6" per side)




(with 20" discs)	<b>2" Depth</b>
Pro-Till 30	352" (8.95m)
Pro-Till 36	431" (10.95m)
(with 20" discs)	<b>MAX Depth</b>
Pro-Till 30	355" (9.0m)
Pro-Till 36	434" (11.0m)

(Consider setting the GPS to include a 6" implement offset to the right)

\* Refer to operators manual for complete safety and operation info.

**143411 v1.3**



## B Put in Field Position

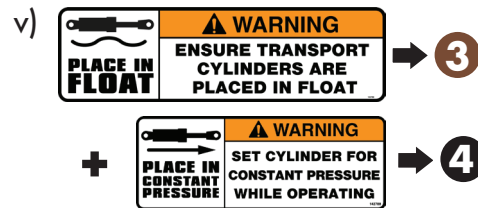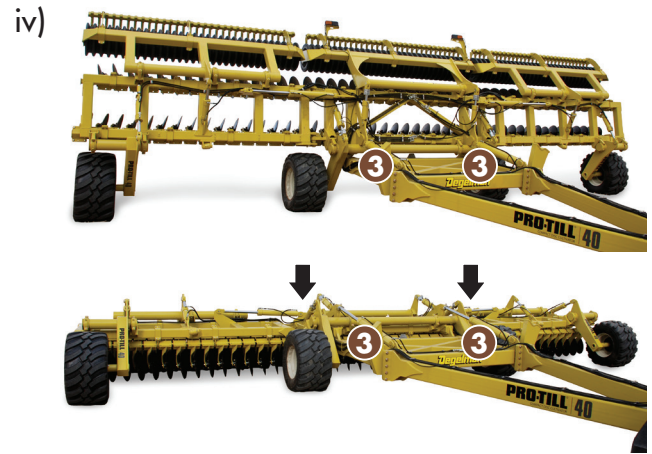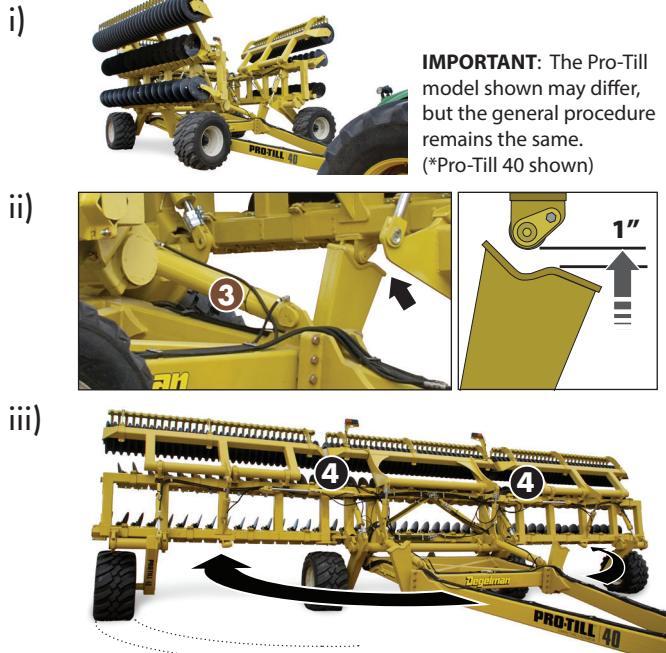


**IMPORTANT:** Operator must read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.

## C Set Cutting Depth

**IMPORTANT:** Re-phase and cycle oil in the Depth Control Cylinders ① ② before use. This is especially important after long periods of storage.

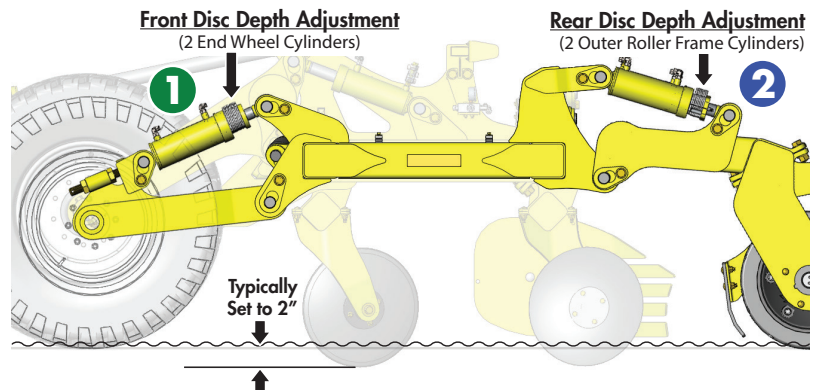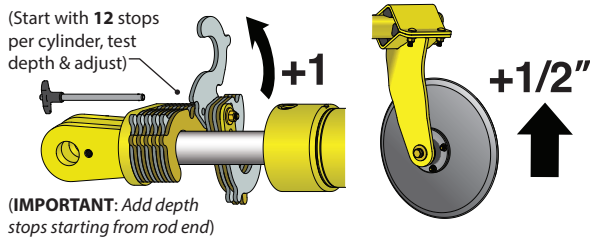

## D Test. Check. Adjust.

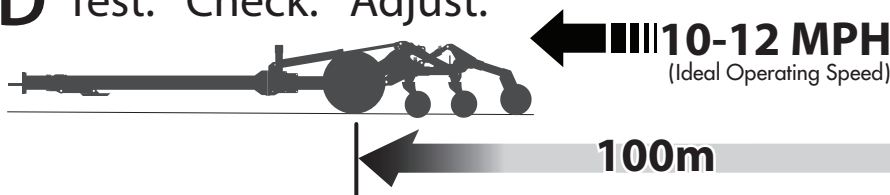

## E Lower ① Wheels for Headland Turns.

## F MAX Transport Speed: 40 km/h (25 MPH)

### Scrapper Position Overview (Rubber Rollers)

