


QUICK-START GUIDE*

for PRO-TILL 33/40


* Refer to operators manual for complete safety and operation info.



A Connect Hydraulics


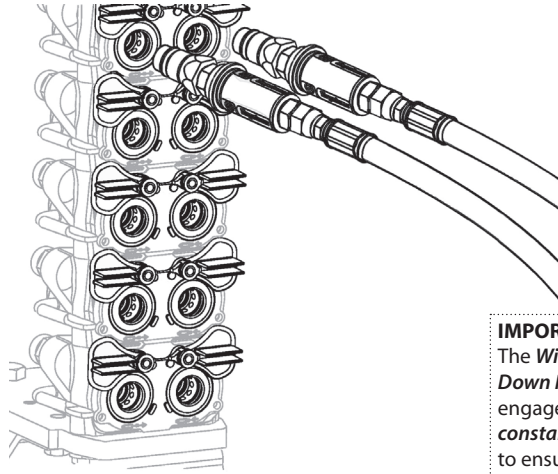


- 1 WHEELS
- 2 ROLLERS
- 3 TRANSPORT
- 4 WINGS
- 5 JACK

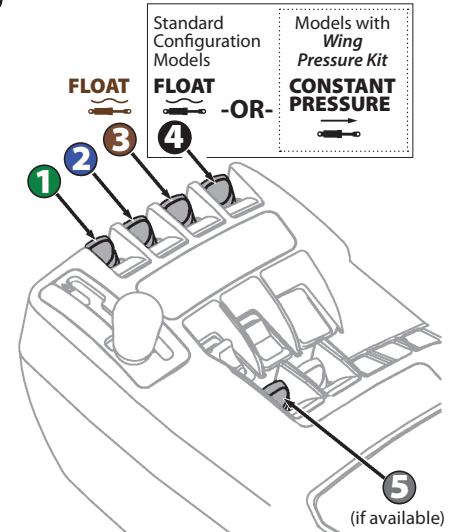

IMPORTANT: Models with Wing Pressure Kit

The Wing Cylinder Circuit includes a Down Pressure Valve. Operator must engage wing circuit hydraulics constantly in the extended direction to ensure constant down pressure.

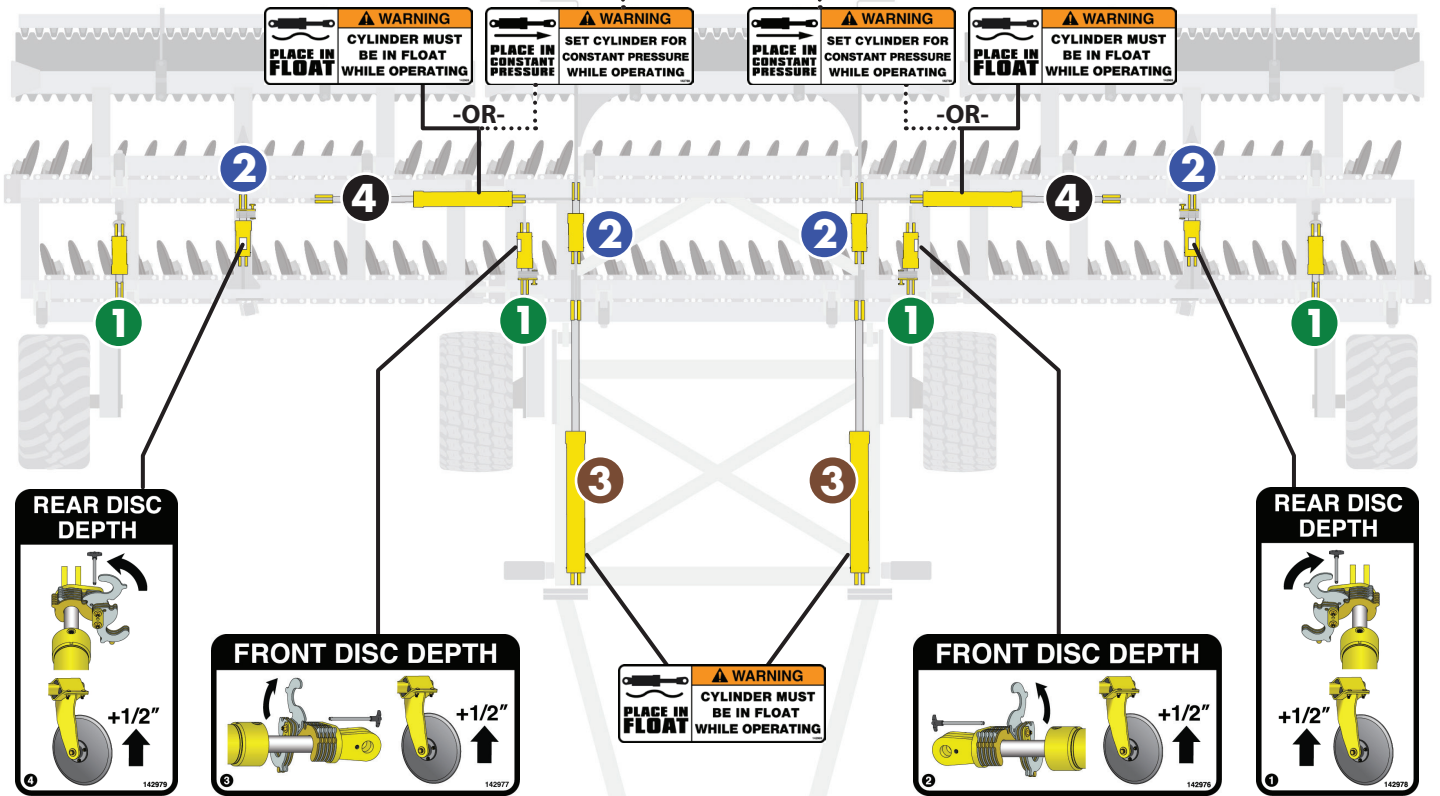

Maintenance

(Check Machine Daily)

Grease Points


- Front Frame / Rockshaft Pins
- Wing Frame Pins
- Cylinder Pins
- Wing Transport Roller Pins
- Hubs & Spindles
- Working points & pins

GPS Reference

(Set overlap to 6" per side)




(with 20" discs)	2" Depth
Pro-Till 33	390" (9.9m)
Pro-Till 40	470" (11.9m)
Pro-Till 40 CT	491" (12.4m)
(with 20" discs)	MAX Depth
Pro-Till 33	393" (10m)
Pro-Till 40	473" (12m)
Pro-Till 40 CT	493" (12.5m)

(Consider setting the GPS to include a 6" implement offset to the right)

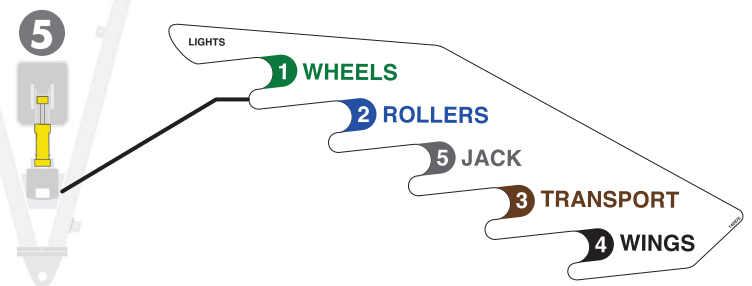

* Refer to operators manual for complete safety and operation info.



B Put in Field Position

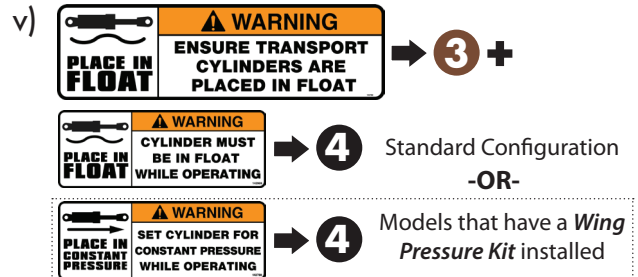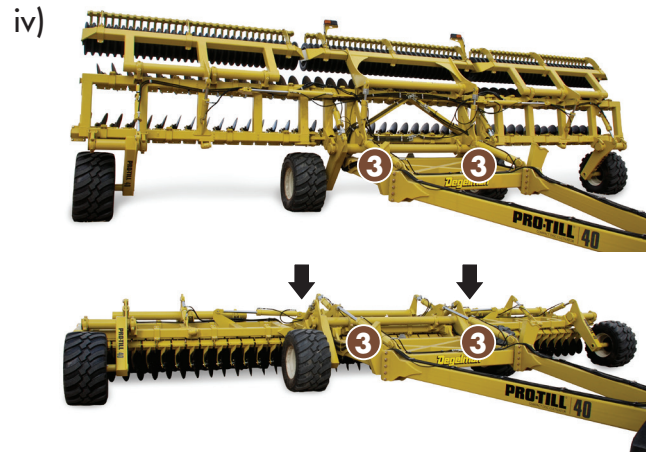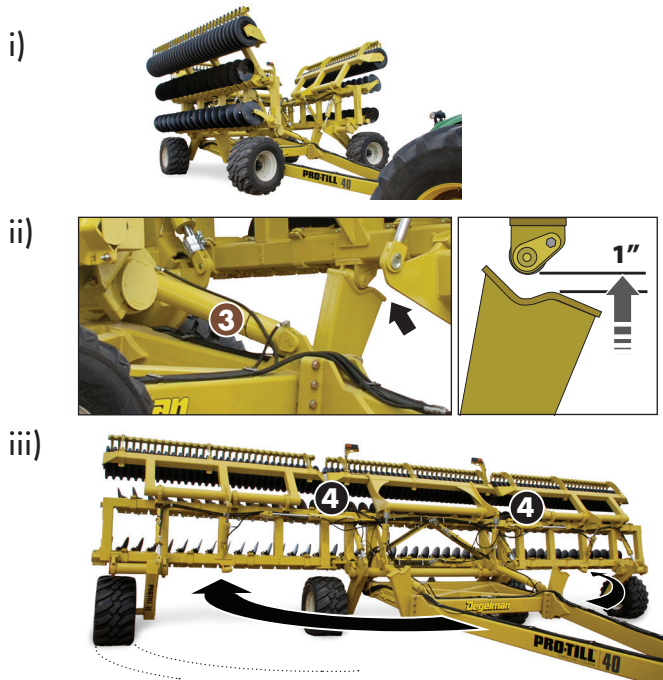


IMPORTANT: Operator **must** read and understand the tractor manual in order to place the required hydraulic circuits into **float position** or **constant pressure position**.

C Set Cutting Depth

IMPORTANT: Re-phase and cycle oil in the Depth Control Cylinders ① ② before use. This is especially important after long periods of storage.

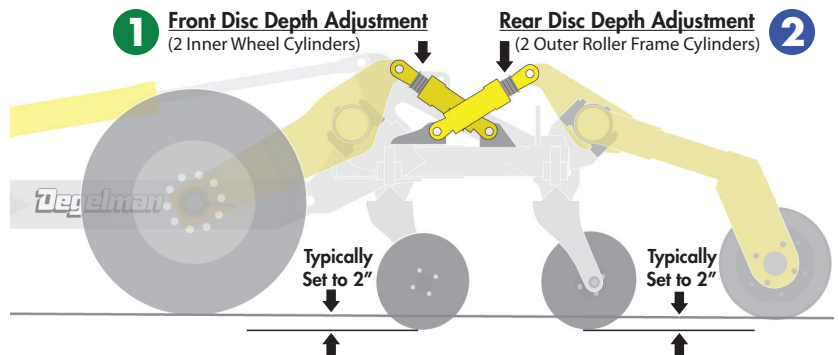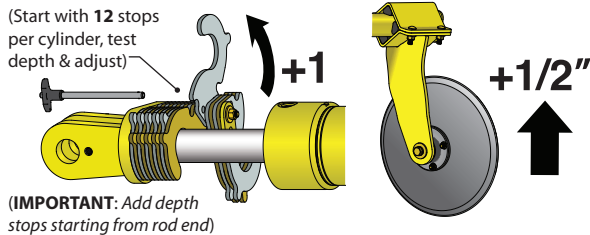

D Test. Check. Adjust.

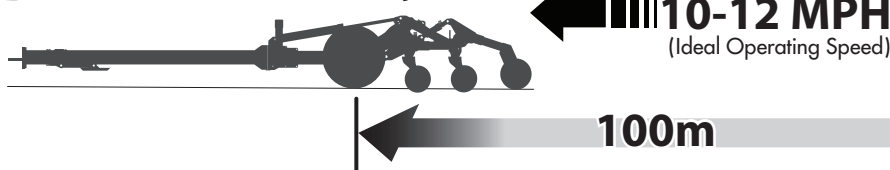

E Lower ① Wheels for Headland Turns.

F MAX Transport Speed: 40 km/h (25 MPH)

Scraper Position Overview (Rubber Rollers)

