


# QUICK-START GUIDE\*

## for PRO-TILL 40


\* Refer to operators manual for complete safety and operation info.




### A Connect Hydraulics

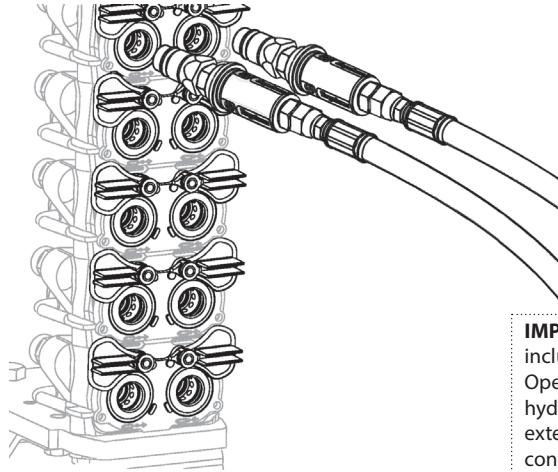

- 1 WHEELS
- 2 ROLLERS
- 3 TRANSPORT
- 4 WINGS
- 5 JACK

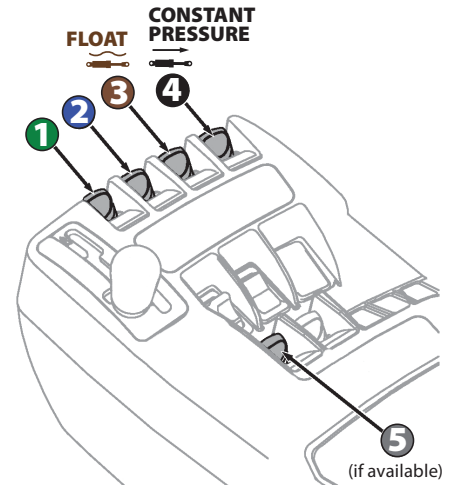

**IMPORTANT:** The Wing Cylinder Circuit includes a Down Pressure Valve. Operator must engage wing circuit hydraulics *constantly* in the extended direction to ensure constant down pressure.

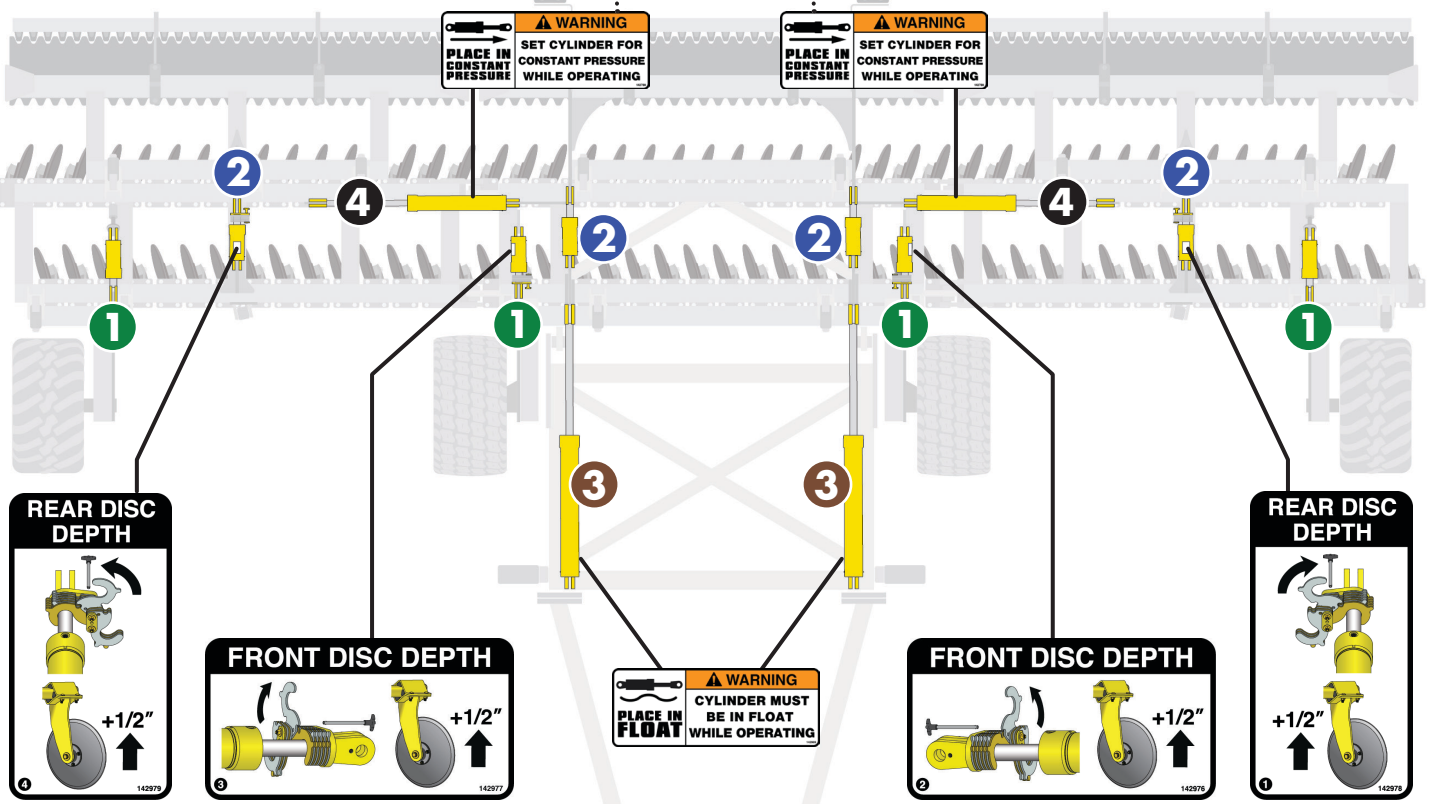

**Maintenance**  
(Check Machine Daily)


- Hydraulic Connections/Hoses
- Working points & pins
- Hubs, Spindles, & Tire Pressure:
  - Center: **94 PSI (648 kPa)**
  - End Wheels: **58 PSI (400 kPa)**
- Check for missing, worn or damaged parts.
- Grease Cylinder Pins, Hubs & Spindles, Wing Transport Roller Pins

**GPS Reference**  
(Set overlap to 6" per side)

(with 20" discs) **2" Depth**  
Pro-Till 40 470" (11.9m)




(with 20" discs) **MAX Depth**  
Pro-Till 40 473" (12m)

(Consider setting the GPS to include a 6" implement offset to the right)

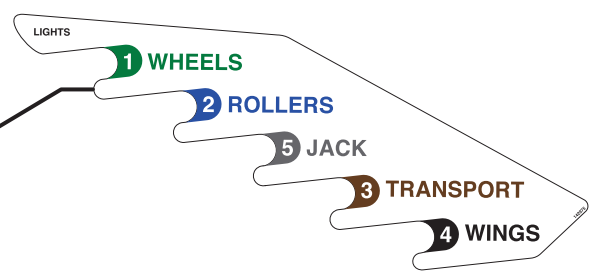

\* Refer to operators manual for complete safety and operation info.



## B Put in Field Position

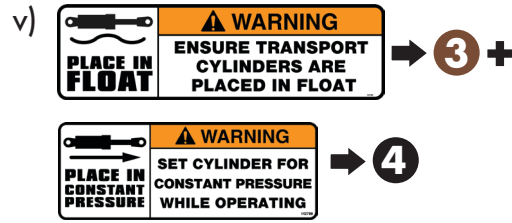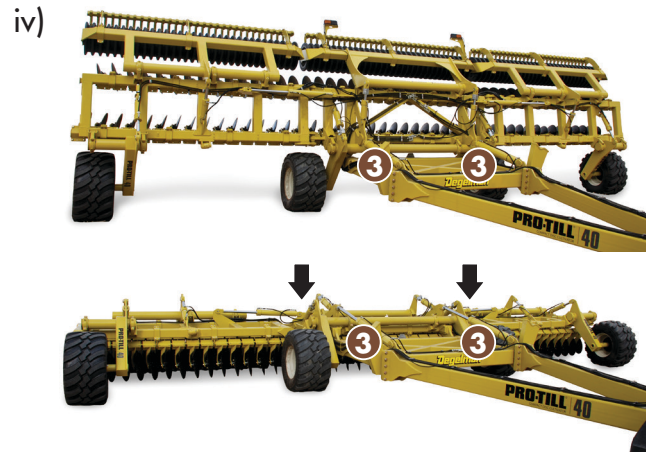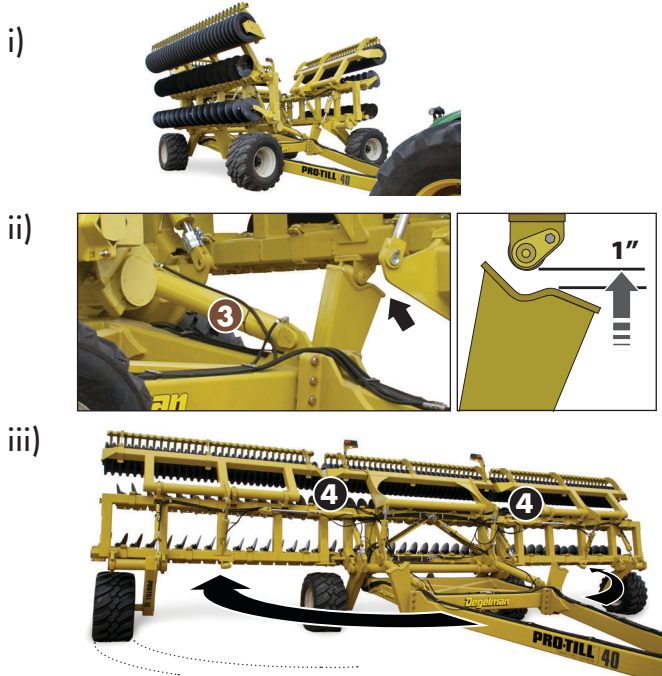


**IMPORTANT:** Operator *must* read and understand the tractor manual in order to place the required hydraulic circuits into Float position or Constant Pressure position.

## C Set Cutting Depth

**IMPORTANT:** Re-phase and cycle oil in the Depth Control Cylinders ① ② before use. This is especially important after long periods of storage.

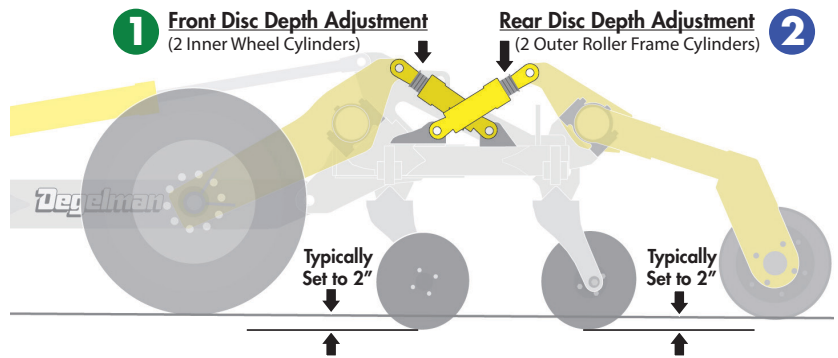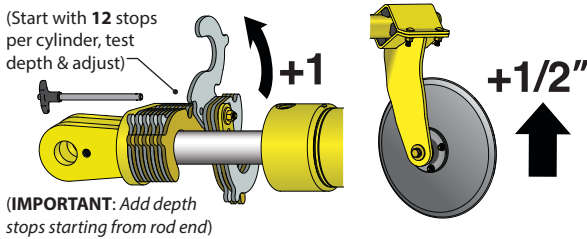

## D Test. Check. Adjust.

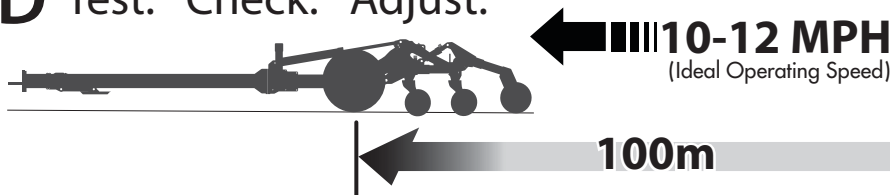

## E Lower ① Wheels for Headland Turns.

## F ⚠ MAX Transport Speed: 40 km/h (25 MPH)

### Scraper Position Overview (Rubber Rollers)

